



CF206

Honda CRF1100L Africa Twin


Kit for left side			
ID	Description	Cat.No	Pcs
1	Lower crash frame	CF206-L	1
2	Steel adapter	X138	1
3	Steel adapter – bottom	X143	1
4	Bolt M10x110mm	879	1
5	Washer flat M10	804	1
6	Washer flat M8-	802	7
7	Safety Nut M8	809	3
8	Bolt M8x25mm	831	3
9	Dural. sleeve lenght = 8mm	DV1334	1
10	Bolt M8x110mm	844	1

Kit for right side			
ID	Description	Cat.No.	Pcs
1	Lower crash frame	CF206-P	1
2	Steel adapter – with nut	X137	1
3	Washer flat M8	802	7
4	Safety nut M8	809	4
5	Bolt M8x25mm	831	2
6	Bolt M8x50mm	837	1

We recommend using medium strenght thread glue during assembly.


Installation Instructions:

- 1.) Deinstall the original engine cover from motorcycle.**
- 2.) Now install the X137, X138 and X143 steel adapters following instructions below.**
- 3.) Put back the engine cover which you took off in Step 1).**
- 4.) Mount the lower crash frames and tighten all bolts.**

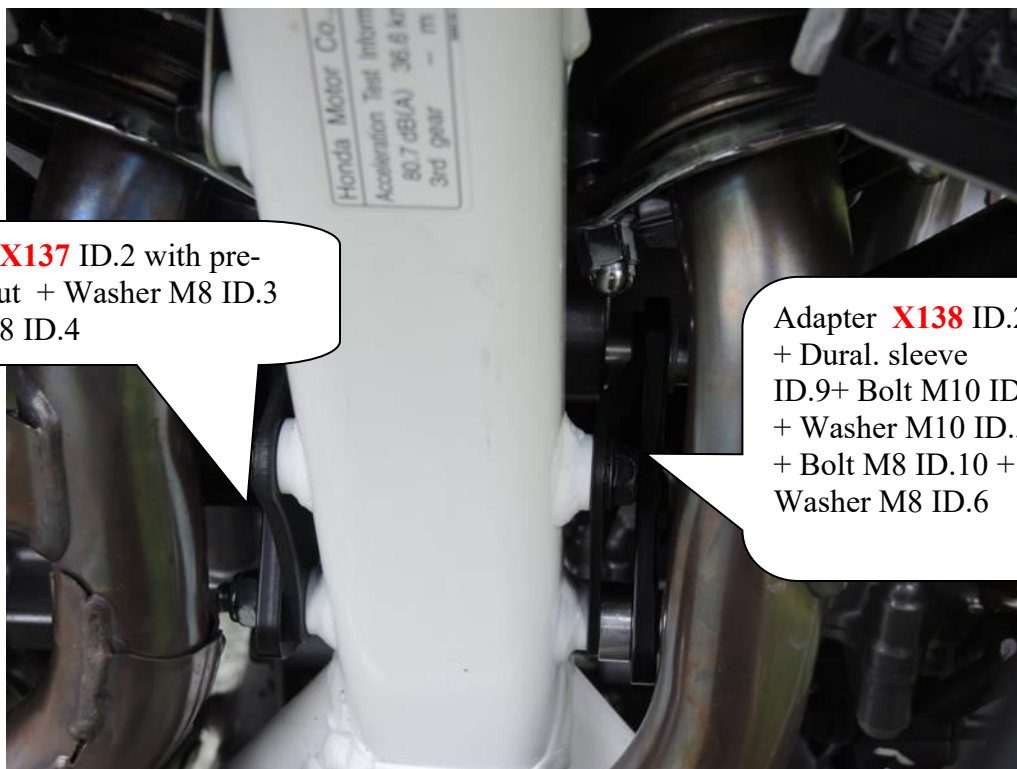


Adapter **X137** ID.2 with pre-forged nut + Washer M8 ID.3 + Nut M8 ID.4


Adapter **X138** ID.2 + Dural. sleeve ID.9+ Bolt M10 ID.4 + Washer M10 ID.5 + Bolt M8 ID.10 + Washer M8 ID.6

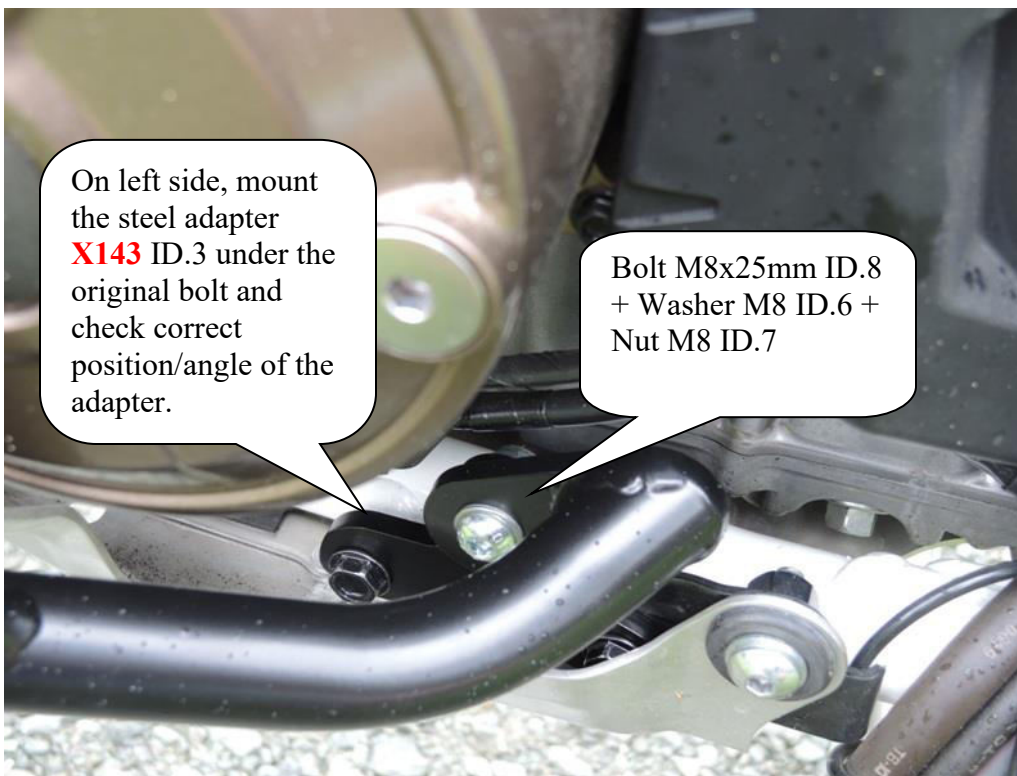

On left side, mount the steel adapter **X143** ID.3 under the original bolt and check correct position/angle of the adapter.

Bolt M8x25mm ID.8 + Washer M8 ID.6 + Nut M8 ID.7

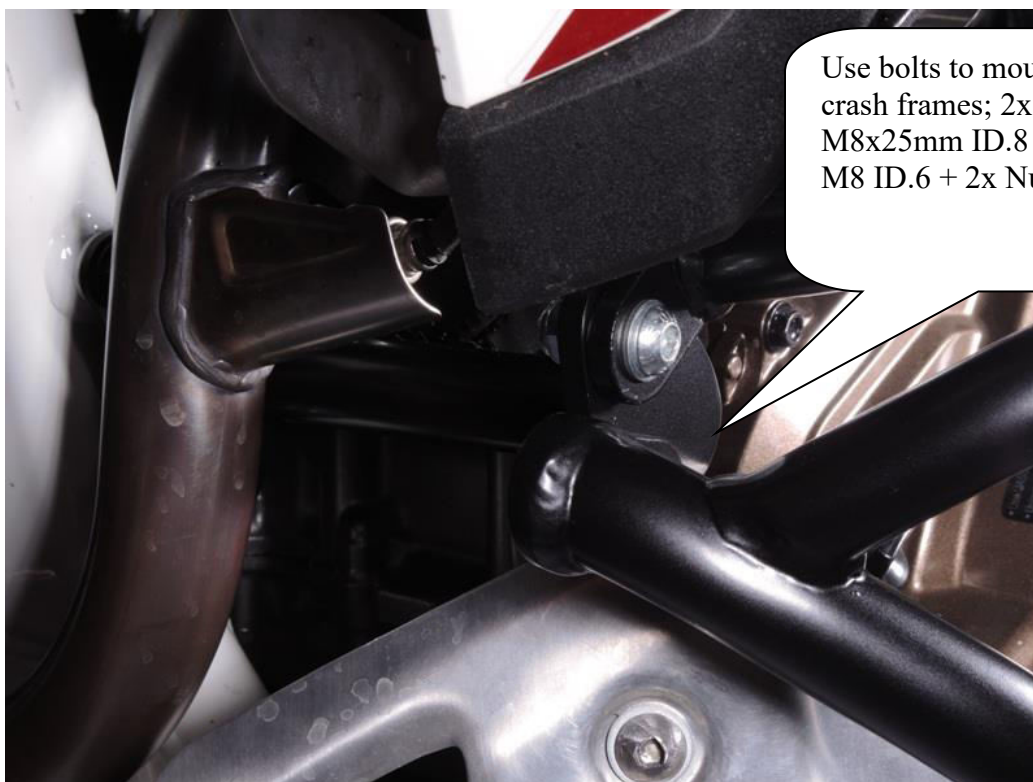

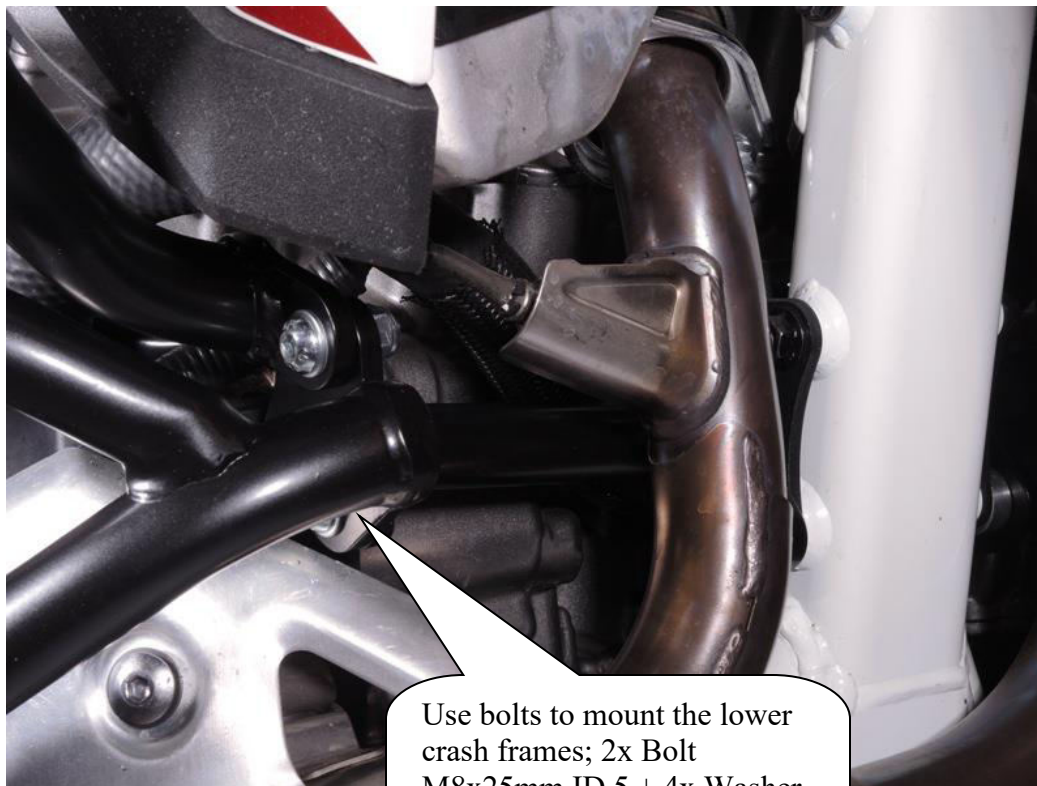

Use bolts to mount the lower
crash frames; 2x Bolt
M8x25mm ID.5 + 4x Washer
M8 ID.3 + 2x Nut M8 ID.4