

CS05KD

Honda Varadero XL 1000 V

Assembly kit left side:

ID	Popis	Kat.č	Ks
1	Left adapter CS05	X102	1
2	Bolt M10x25	1042	1
3	Flat Washer M10	804	1
4	Flat Washer M12	803	1
5	Self-locking Nut M12	811	1
6	Self- locking Nut M10	810	1
7	Spring	X93	1
8	Spring	X57	1

Assembly Kit Right side :

ID	Popis	Kat.č	Ks
1	Right adapter CS05	X103	1
2	Bolt M12x240	1041	1
3	Flat Washer M12	803	1
4	Steel roller M12 d=27mm	1254	1
5	Bolt M10x55	1002	1
6	Flat Washer M10	804	1
7	Steel roller M10 d=27mm	1253	1
8	Self-locking Nut M10	810	1


Mounting procedure right side:

1. First attach the left and right adapter CS05 to the center stand, see photo.
2. Then, attach the sprocket to the motorcycle frame and fasten M12 (ID.3), M12 washer (ID.3), M12 (ID.4) and bolt (ID.5), M10 washer (ID.6) roller M10 (ID.7), nut M10 (ID.8)

Mounting procedure left side:

1. On bolt M12 screw washer M12 (ID.4), nut M12 (ID.4) and secure with a bolt M10 (ID.2), nut M10 (ID.3) and washer M10 (ID.6)
2. Finally, tighten and replace the springs (ID.7 a 8)

It is recommended to start the installation first by holding the M12 bolt

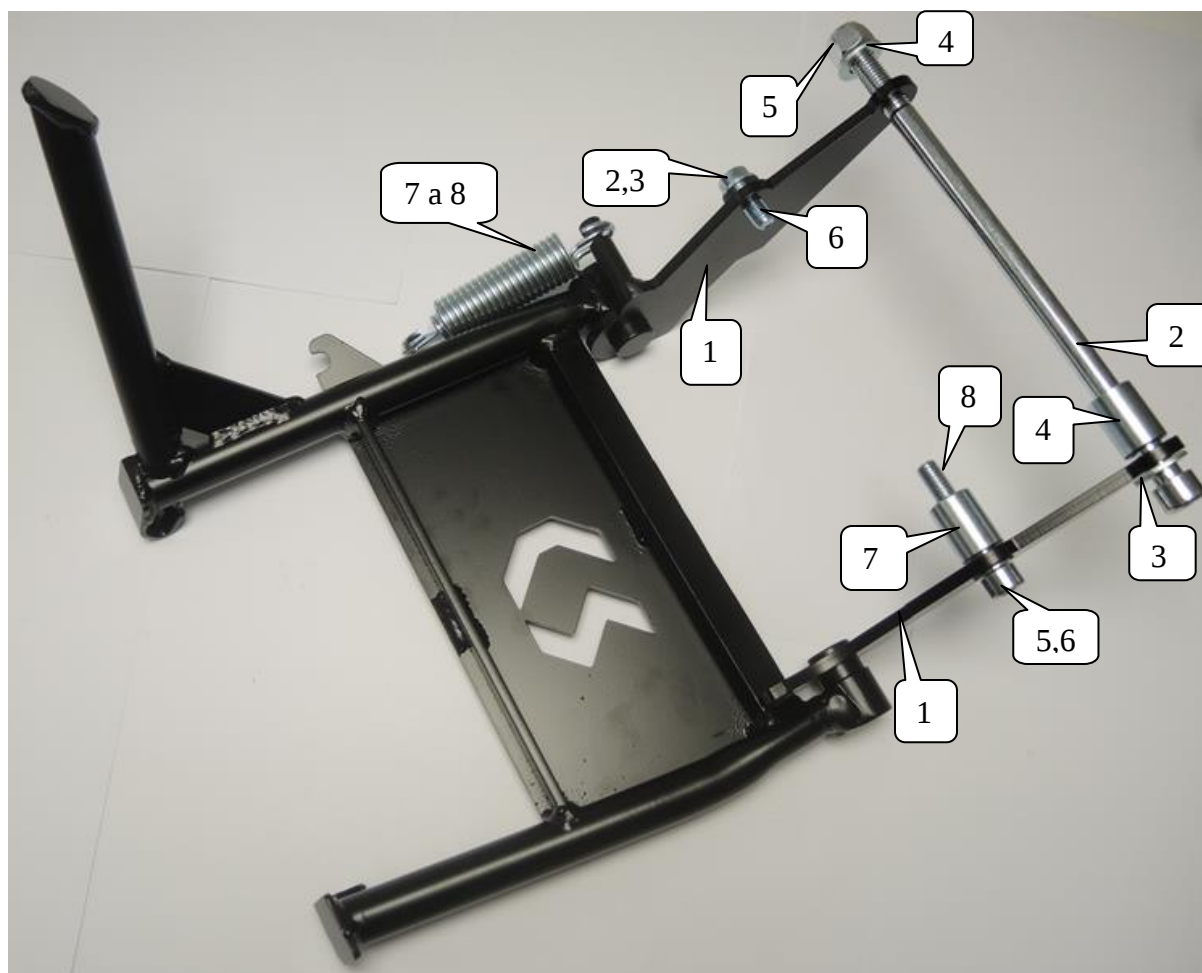

Attention – for threads of all bolts, we recommend using medium strenght thread glue (blue color).