





Aprilia Shiver 900  
Crash Protection


Installation Instructions

## Kit Contents PRN006010


- (A) 1 x Shaft
- (B) 2 x Bobbin Spacers
- (C) 2 x M12 Washers
- (D) 2 x M12 Nyloc
- (E) 2 x Bobbin Heads
- (F) 2 x Polyurathane Washers

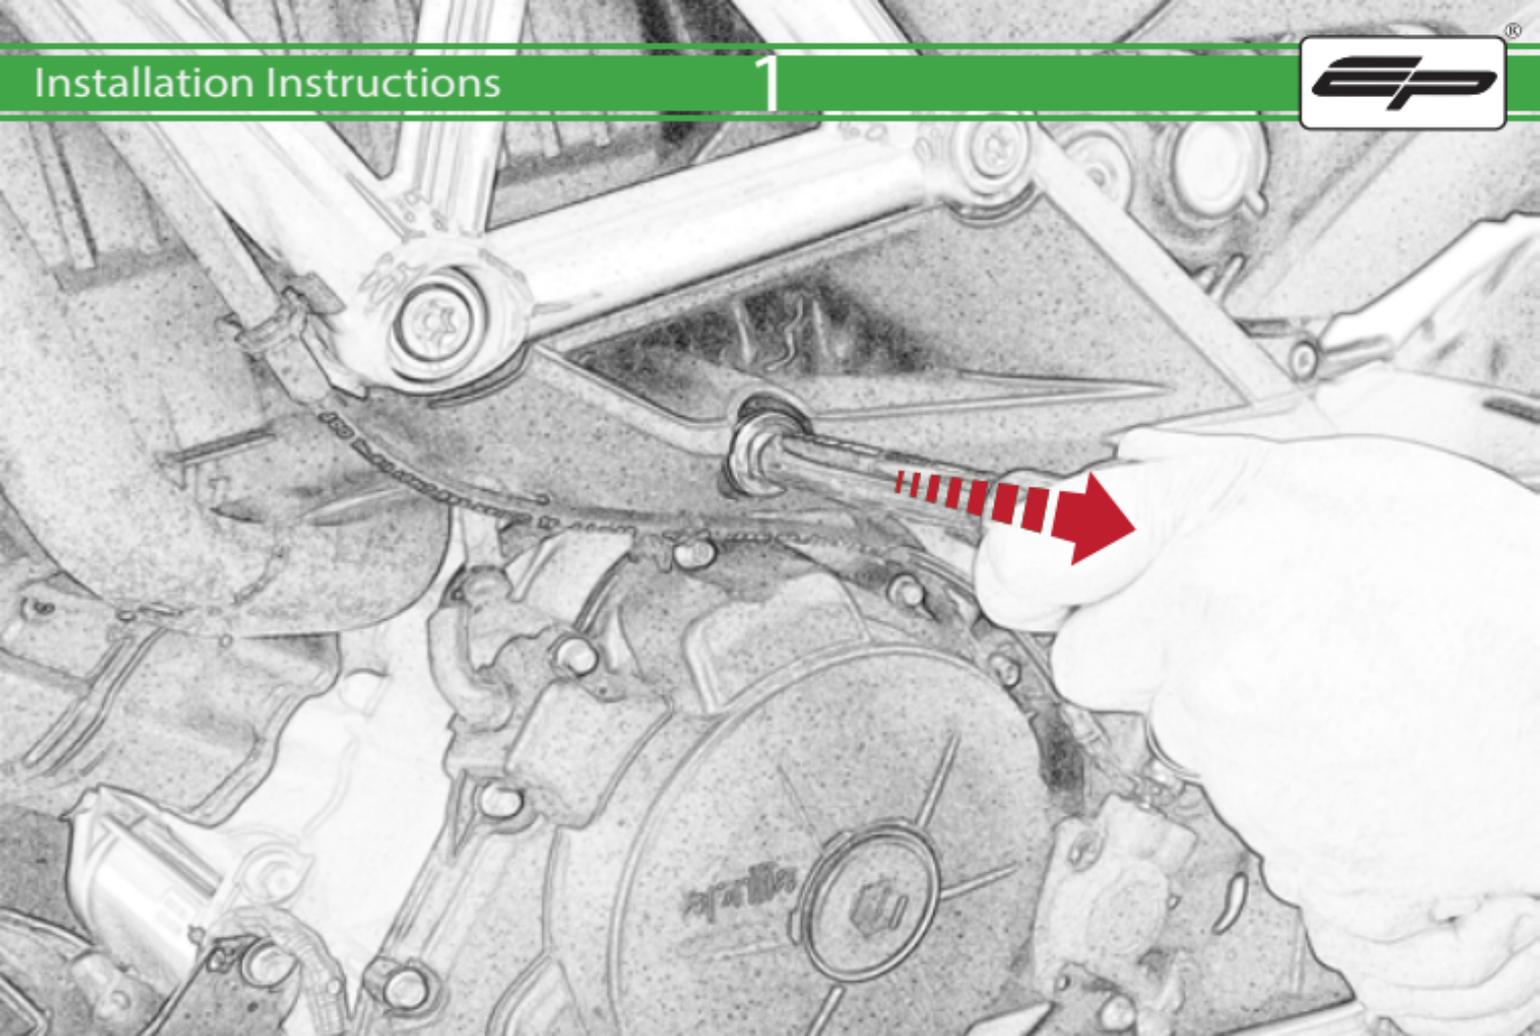

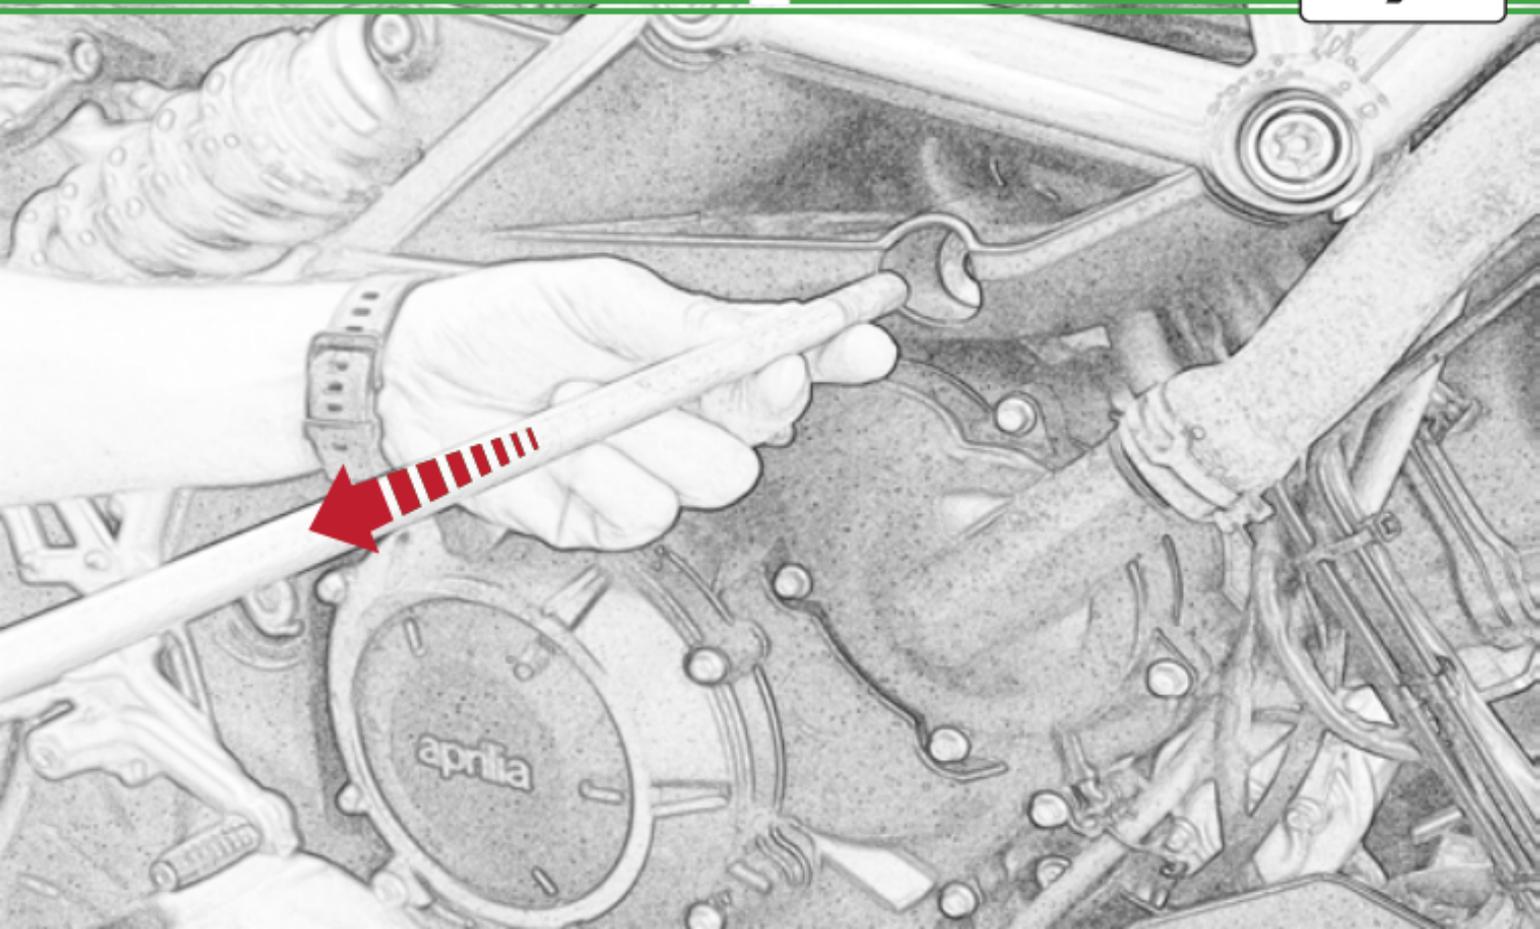


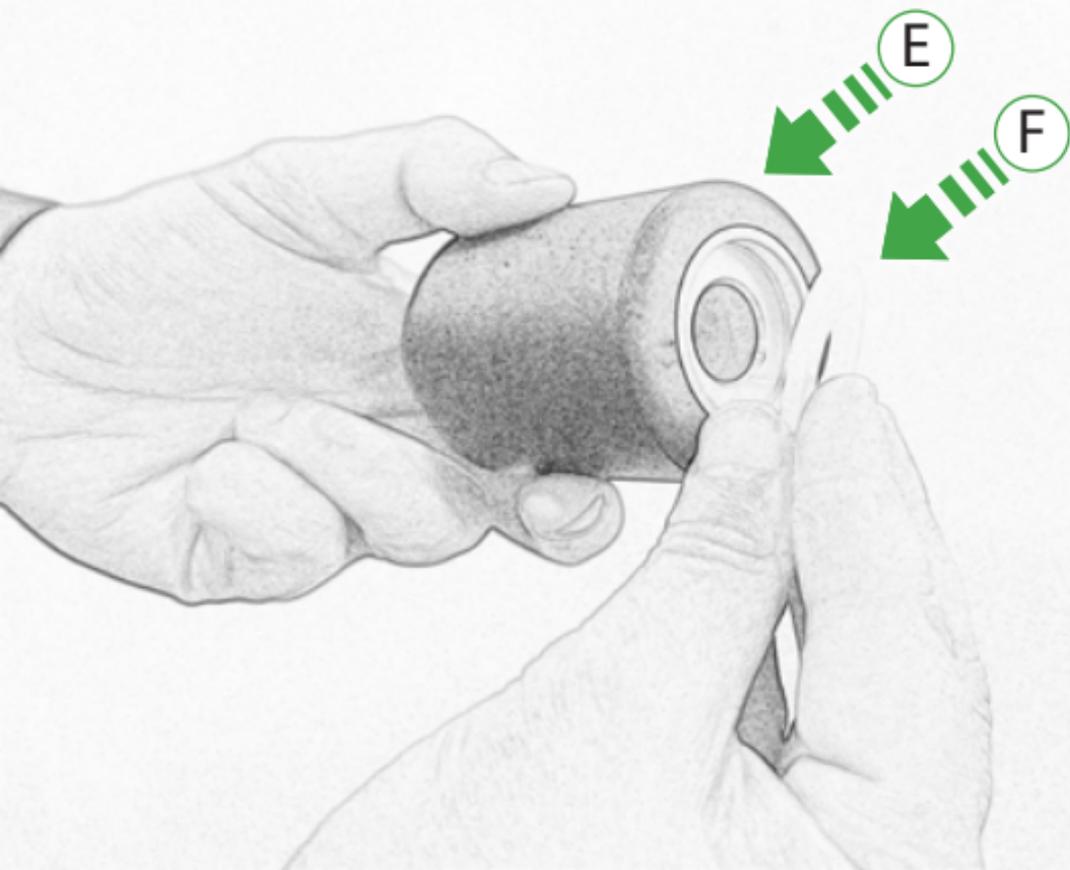

Repeat  
Both Sides

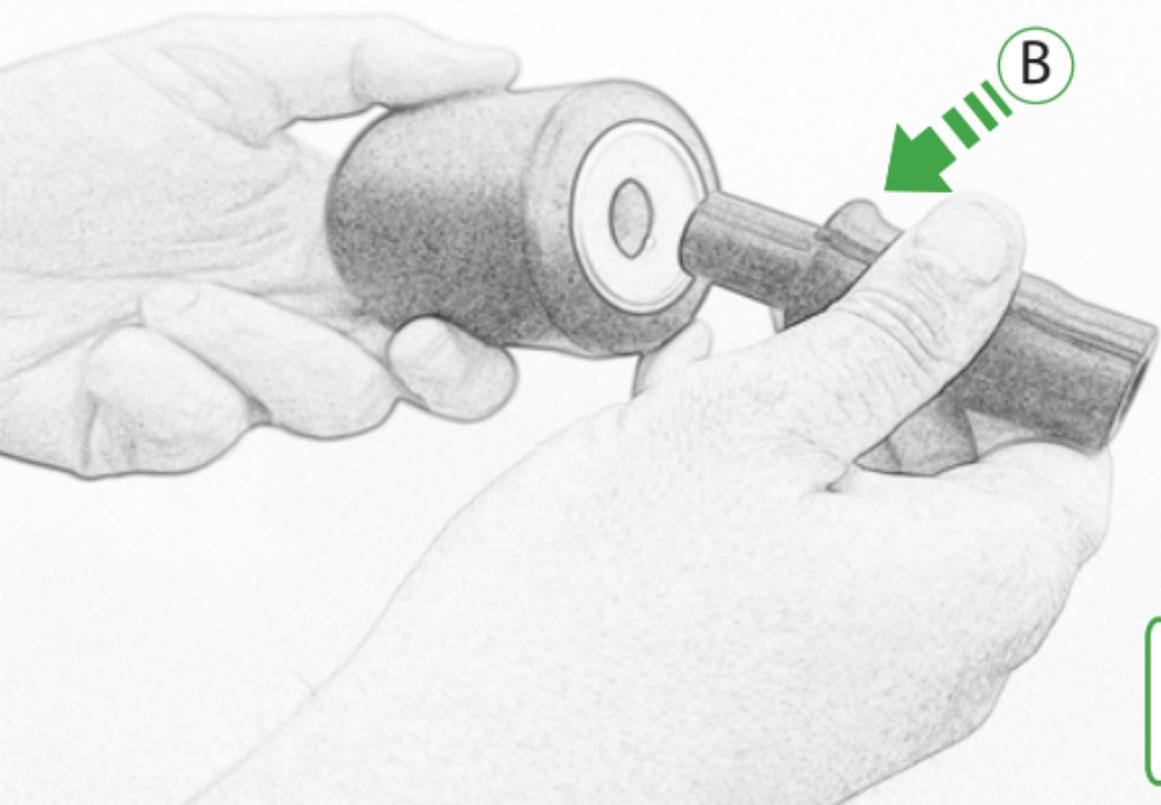


Repeat  
Both Sides

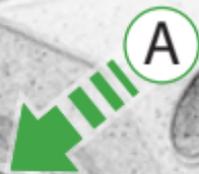


Reposition OEM  
Spacer before  
Inserting the shaft




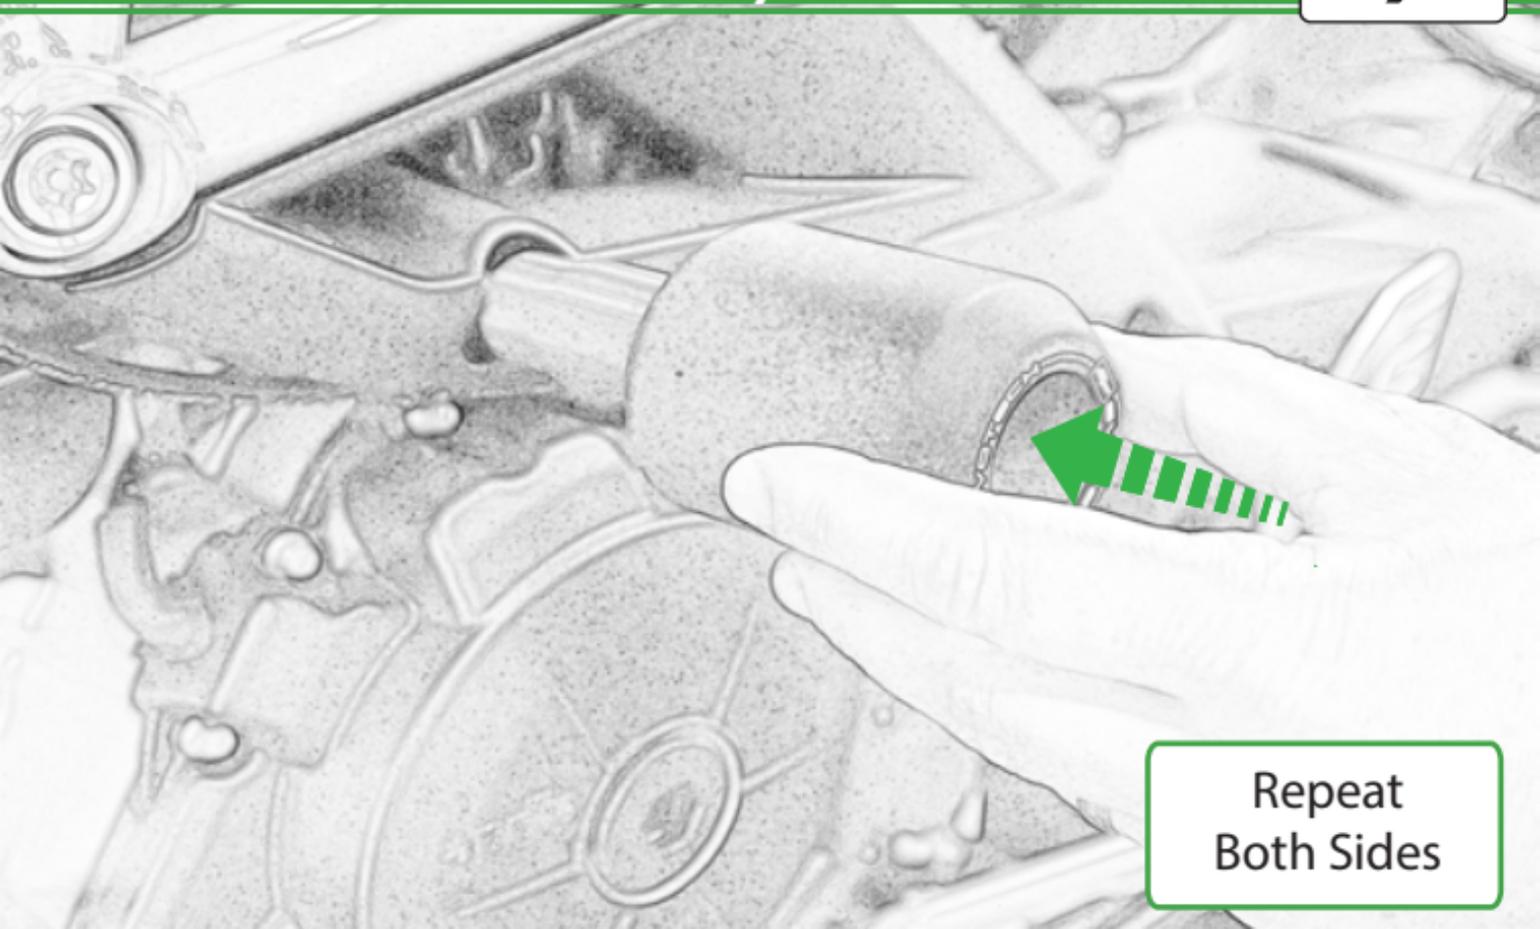

Repeat  
Both Sides

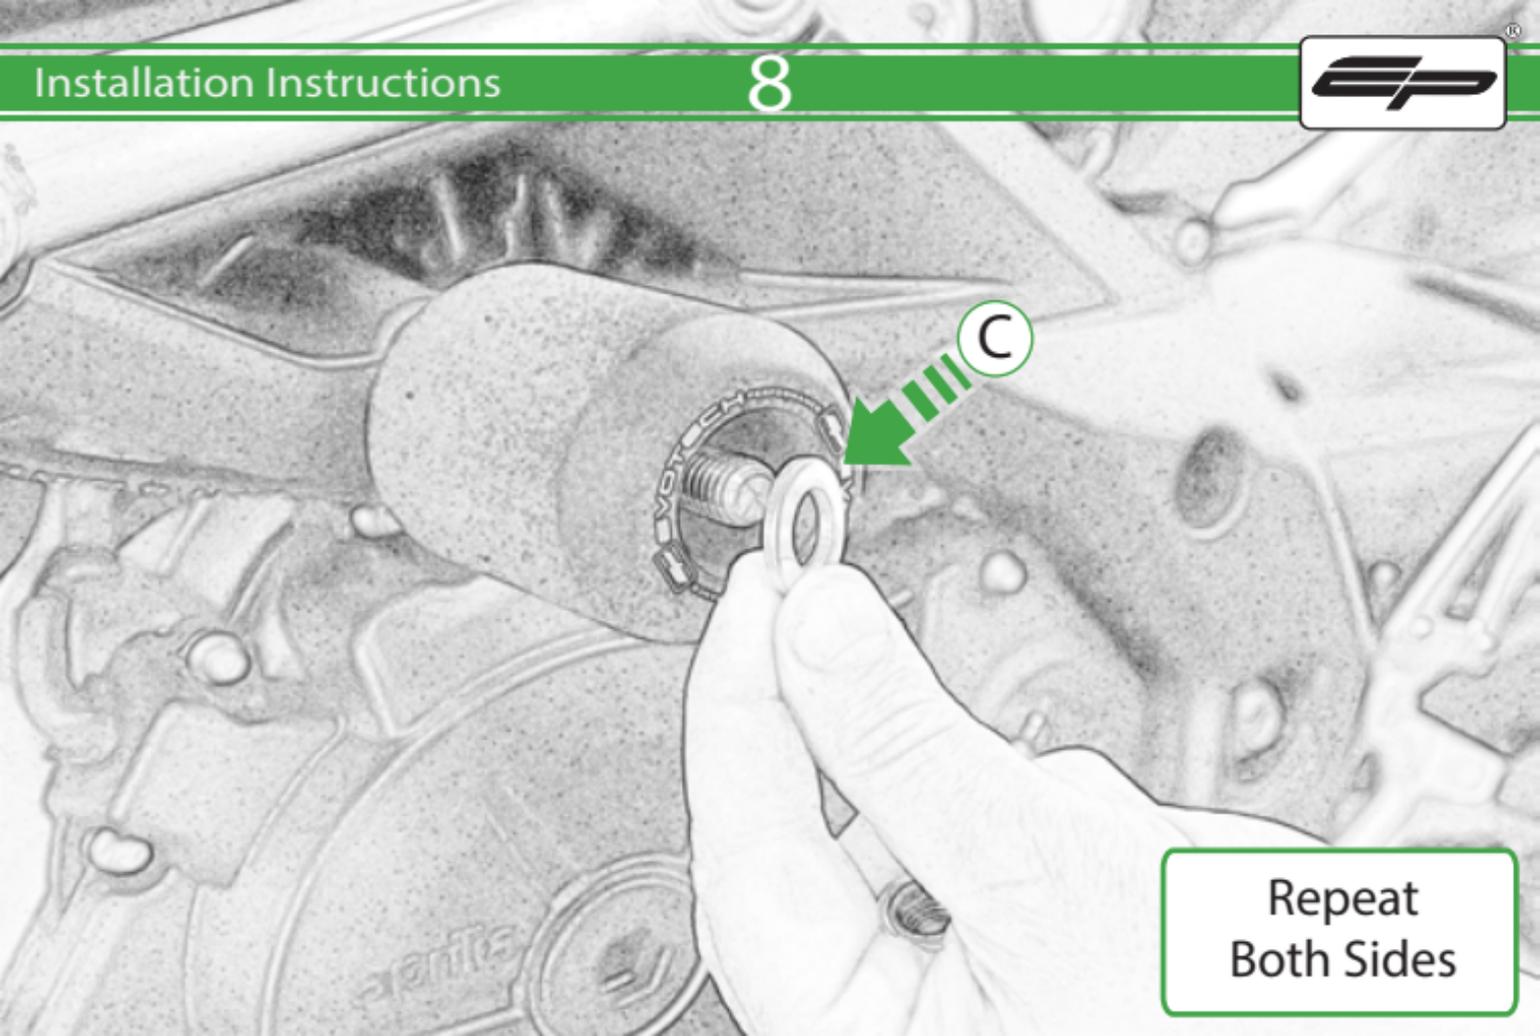


Repeat  
Both Sides

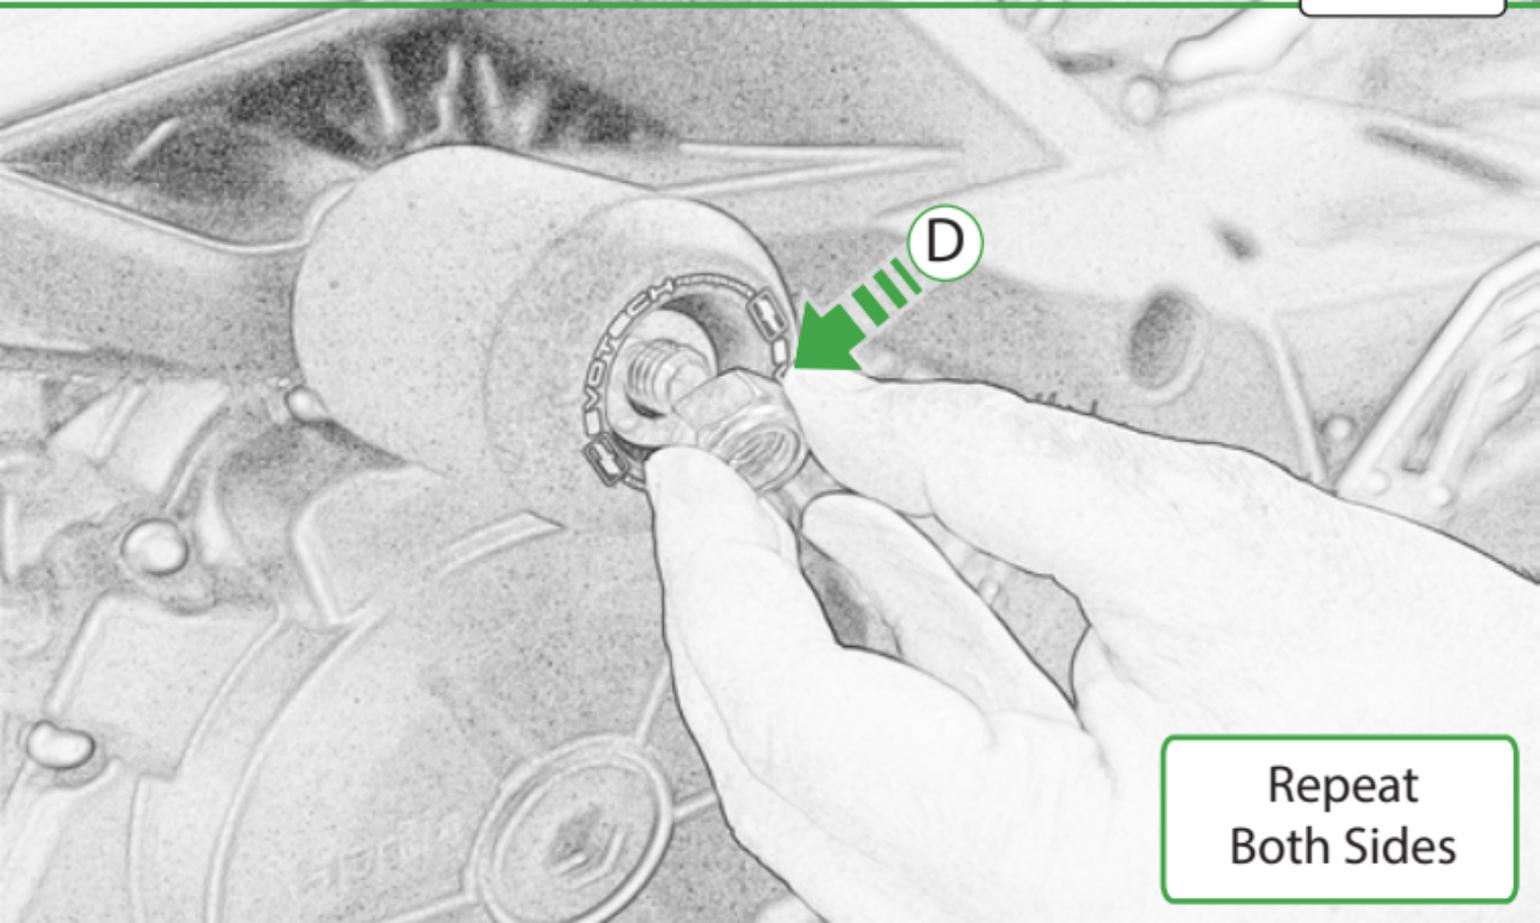

D

Repeat  
Both Sides

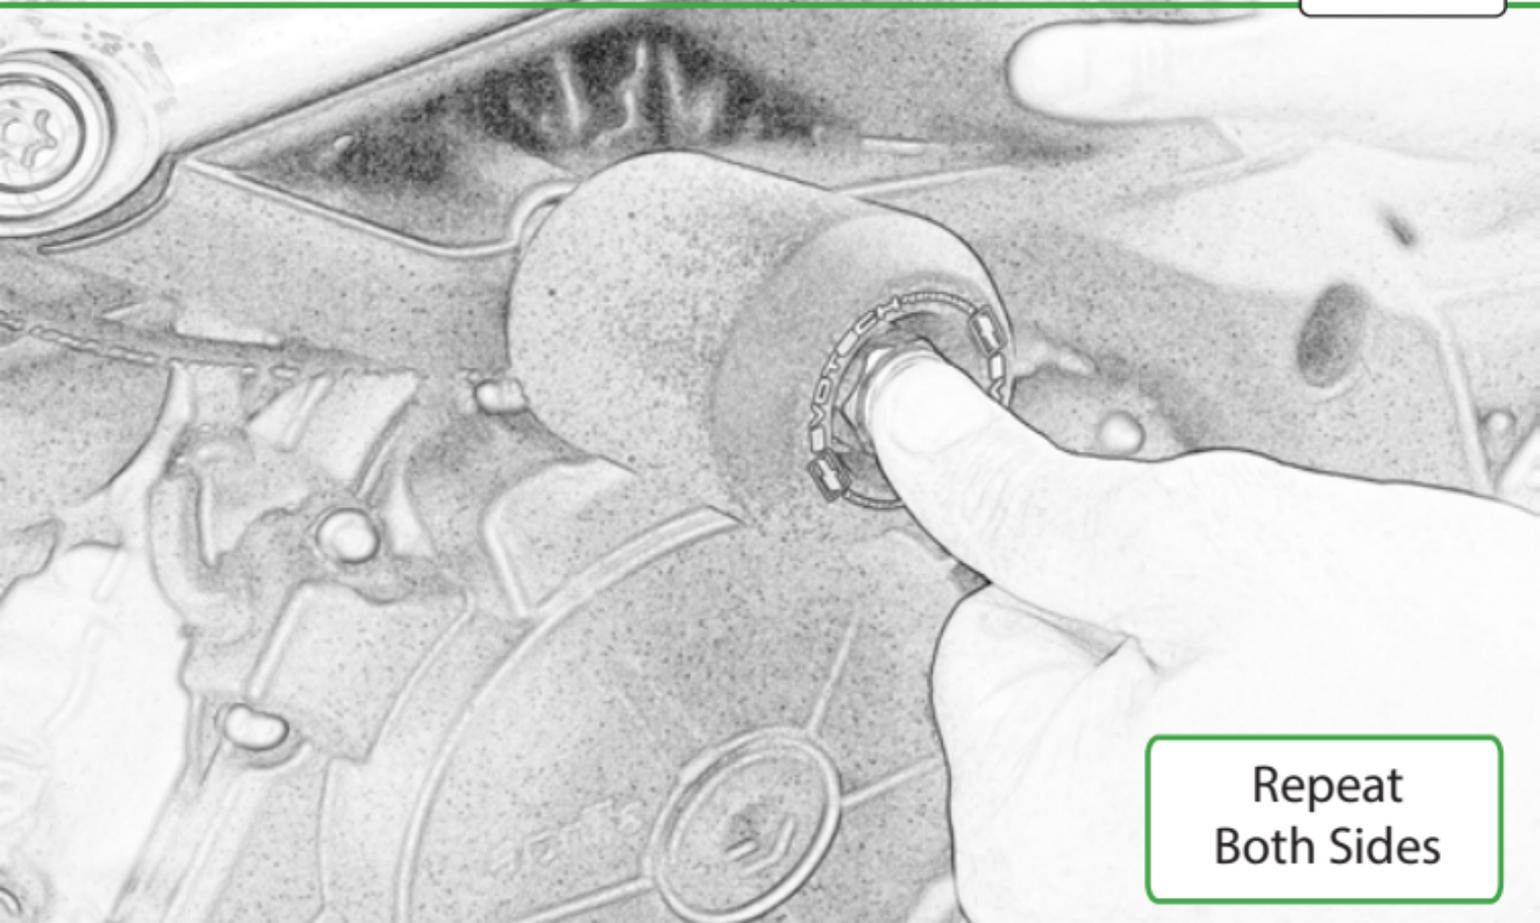

Repeat  
Both Sides



Fully Tighten  
85Nm



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)